



# Installation Instructions

(For IRB)

## What is in the IRB box?

IR Blaster (IRB)



USB Cable




## IR Blaster (IRB)

### Technical specifications

Technical Attributes	
Mode of operation	Voice, Mobile app
Material	Polycarbonate
Color	Black
Product dimensions	56mm x 56mm x 20mm
Product weight	31gms
Input power	DC 5V, 2A
IR frequency	20-50Khz
Power consumption	0.6W idl, 5W max
Range	8 meter (line of sight)
Operating temperature	0°C - 65°C non condense
Shock proof	Yes
Water resistance	No
Warranty	5 Years
Connection	Wi-Fi
Wi-Fi frequency	Wi-Fi 2.4G (b/g/n)
Operation	Android and iOS

## Setting up IR blaster

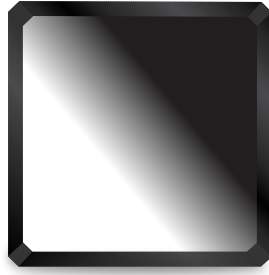

- ▶ Plug the micro USB cable into the IRB's micro USB port, connect the other end to the power adaptor, and then plug the power adaptor into the electrical outlet.
- ▶ Press the reset button for few seconds to start the configuration mode.

### **For setup**

- ▶ Wi-Fi network with internet access (2.4 GHz only), a power supply (5VDC 2A). Make sure the IRB is in the line of sight of the appliances.