

## **CURTAIN REMOTE**



---

### Quick Links

---

[\*\*Product Description\*\*](#)

[\*\*Technical Specification\*\*](#)

[\*\*Remote Configuration\*\*](#)

## **Product Description**

The RF-based Curtain Remote is available in three variants— 1-channel, 2-channel, and 16-channel designed to control one or multiple curtain motors. Each channel supports three operations: Open, Close, and Pause, offering convenient and flexible curtain control.

## **Technical Details**

### **Technical Specification:-**

Power	3V
Battery usage life	3 years
Transmitter distance	Outdoor 200 Meters, Indoor 35 Meters
Controller frequency	433.92 Mhz
Controller power	10mW
Connector Type	Radio frequency, wireless

## **Remote Configuration**

### **1. To learn the 1-channel remote with the curtain flow**

- Press the configuration button on the curtain flow.
- When the red light on the curtain flow turns on, press the P2 on the remote twice to complete the pairing.

### **2. To learn the 2-channel remote with the curtain flow**

- Press the configuration button on the curtain flow.
- When the red light on the curtain flow turns on, press the P1 or P2 on the remote twice, depending on the side you want to control.
- Configuration is now successfully completed.

### **3. To learn the 16-channel remote with the curtain flow**

- On the remote, first select the channel to which you want to assign the curtain motor.
- Press the configuration button on the curtain flow.
- When the red light on the curtain flow turns on, press the left side P2 button on the remote twice to complete the pairing.


**Note:-** If you have up to seven curtains and want to assign numbers from 0 to 5 on display, press and hold the right-side P2 button. A lock symbol will appear on the display, indicating that the numbering is locked up to 0-5.

### **Group Control Setup**


- Select a group channel (e.g., Channel 15) on the remote.
- Put each curtain motor in learning mode (press the config button on the motor).
- Press P2 twice on the selected group channel while the curtain flow is in learning mode.
- Repeat for all curtain flow you want in the group.
- Control all grouped curtains using the group channel.

## Remote Layout:-

### 1-Channel Remote

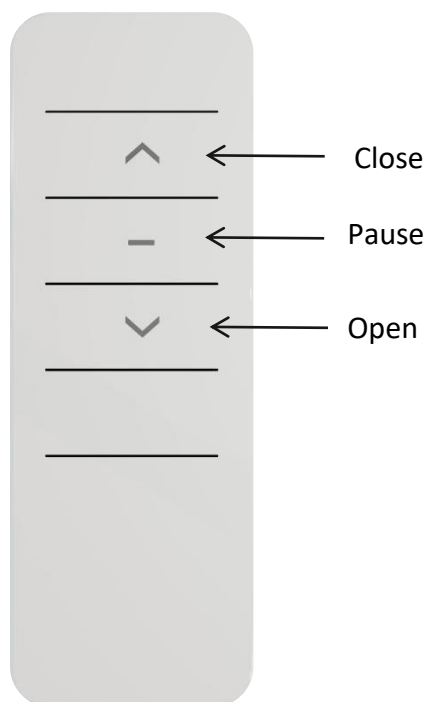

### 2-Channel Remote

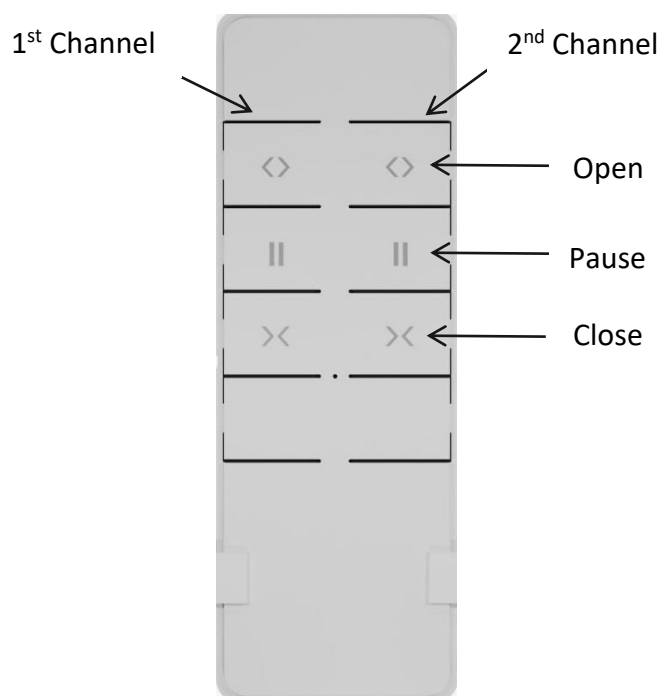

### 16-Channel Remote

