


CURTAIN CORE

CC1.1

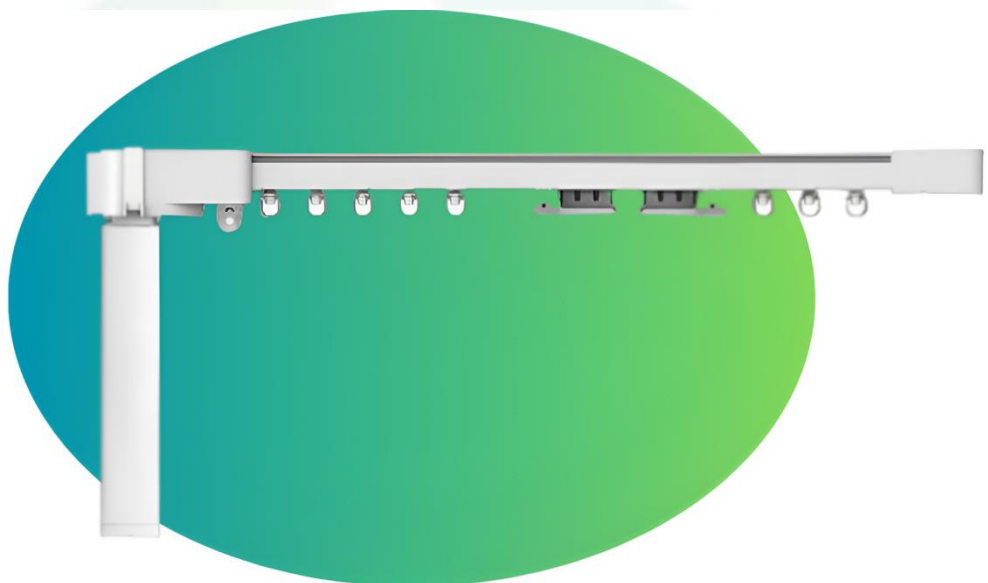

Quick Links

[Product Overview](#)

[Product Features](#)

[Technical Specification](#)

[Wiring Color Code](#)

[Curtain Motor](#)

[Remote Configuration](#)

Product Description

Product Overview :-

Model Number: CC1.1

Description: Curtain Core is a high-quality curtain track system designed for smooth, quiet, and easy curtain movement. Built with a durable sliding mechanism, it ensures effortless operation with minimal resistance.

Product Features :-

- Supports Arabian and Three-pleated curtains.
- Compatible with straight, curved and L-Shaped track.
- Supports three curtain draw styles:
 - 1.Center Opening
 - 2.Left-Side Opening
 - 3.Right-Side Opening
- Supports both ceiling and wall mount installation.
- Manual operation available during power outage.
- Supports auto-cut-off protection on overload.
- Includes electronic limits with auto-calibration.
- Supports track lengths up to 30 feet.
- Supports up to 16-channel RF remote.
- 10 RF remotes can be "learned or saved" in a single curtain motor.
- The RF remote long press supports predefined locations (1/4, 2/4, and 3/4 lengths).

Technical Details

Technical Specification:-

Operating Voltage	100VAC - 240VAC
Frequency Range	50-60 Hz
Rated Power	15W
No. of phase	Single
No. of wires	5
Noise	40db
Rated torque	2.0 N.m
Running speed	16 cm/s
Color	White
Material	ABS
Dimensions (Curtain Motor)	60mm x 50mm x 300mm
Safe curtain weight	50 KG
Warranty	5 years

Environmental Condition:-

Air Humidity	<85% RH (non-condensing)
Operating temperature range	-10 to +50°C
Storage temperature range	-20 to +50°C
Transport temperature range	-25 to +75°C


Control & Communication:-

Remote Communication	RF
RF frequency	433.92 MHz
Control Method	RF Remote, Third-party control


Wiring Color Code

Wire Color	Input
Brown	Phase wire
Blue	Neutral wire
Yellow & Green	Earth wire
Grey/Black	Forward/Reverse wire


Curtain Motor

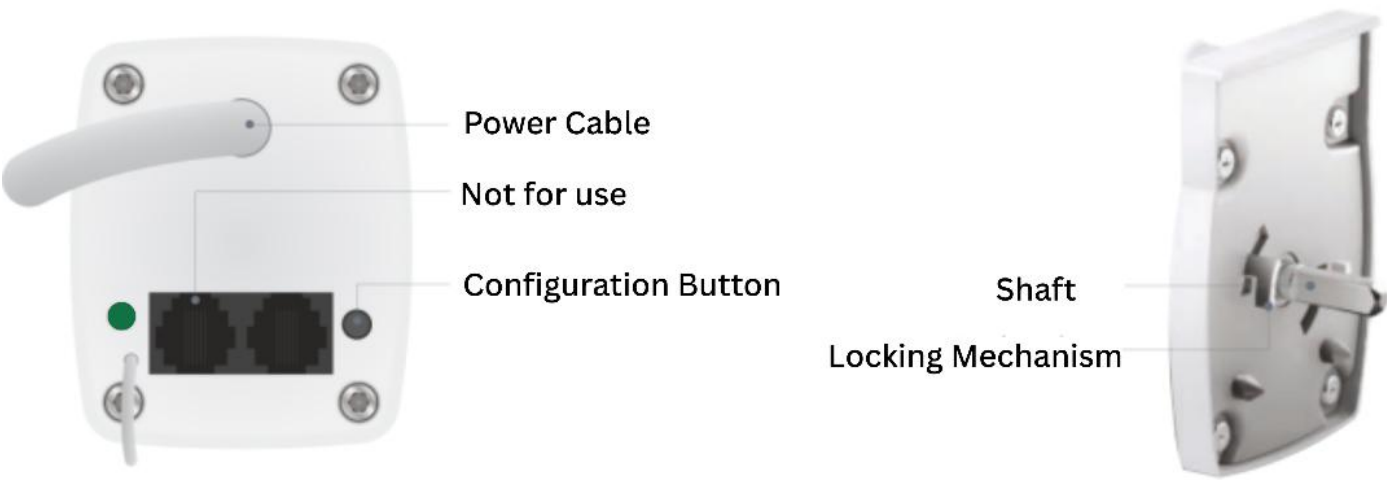

Dimension:-

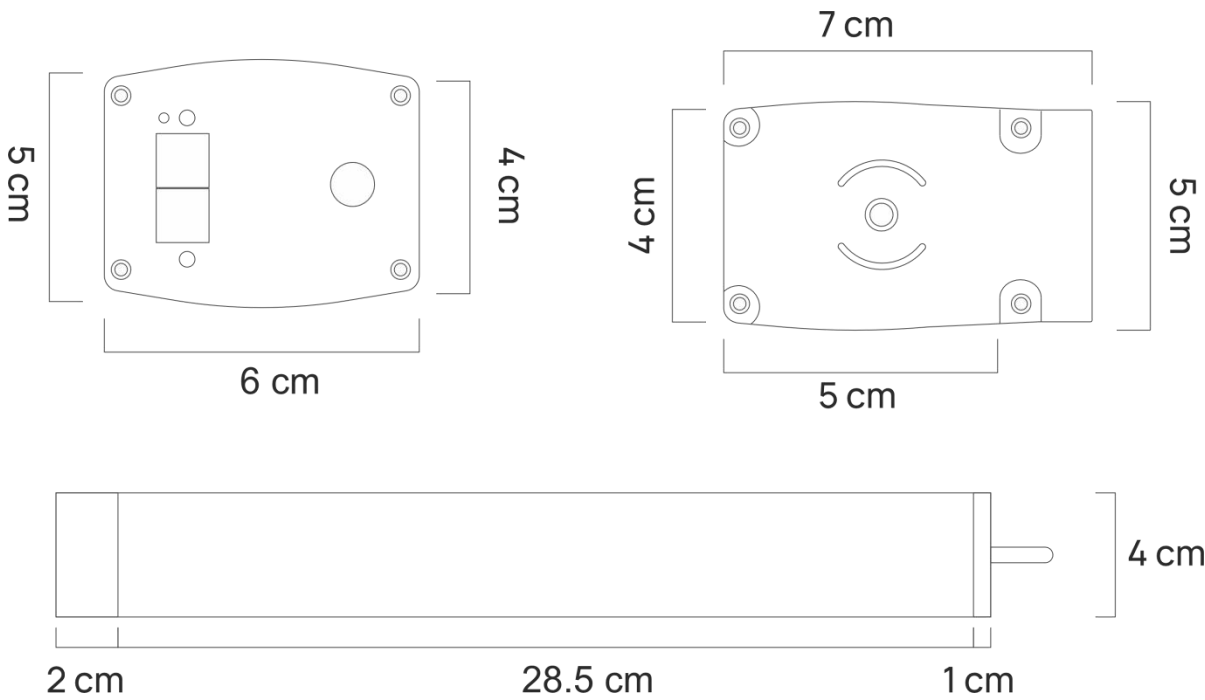


Curtain Track

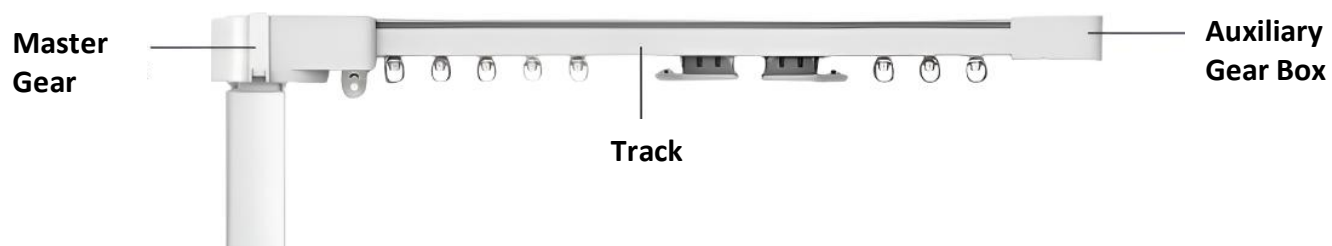

Dimensions:-


1. Master Gear Box:-

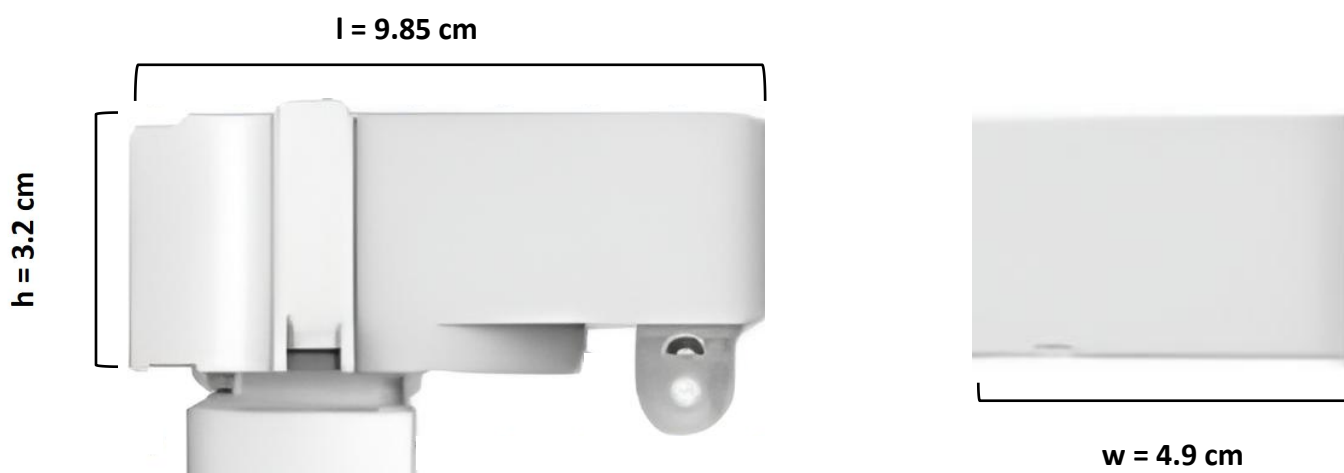

2. Auxiliary Gear Box:-



Track:-

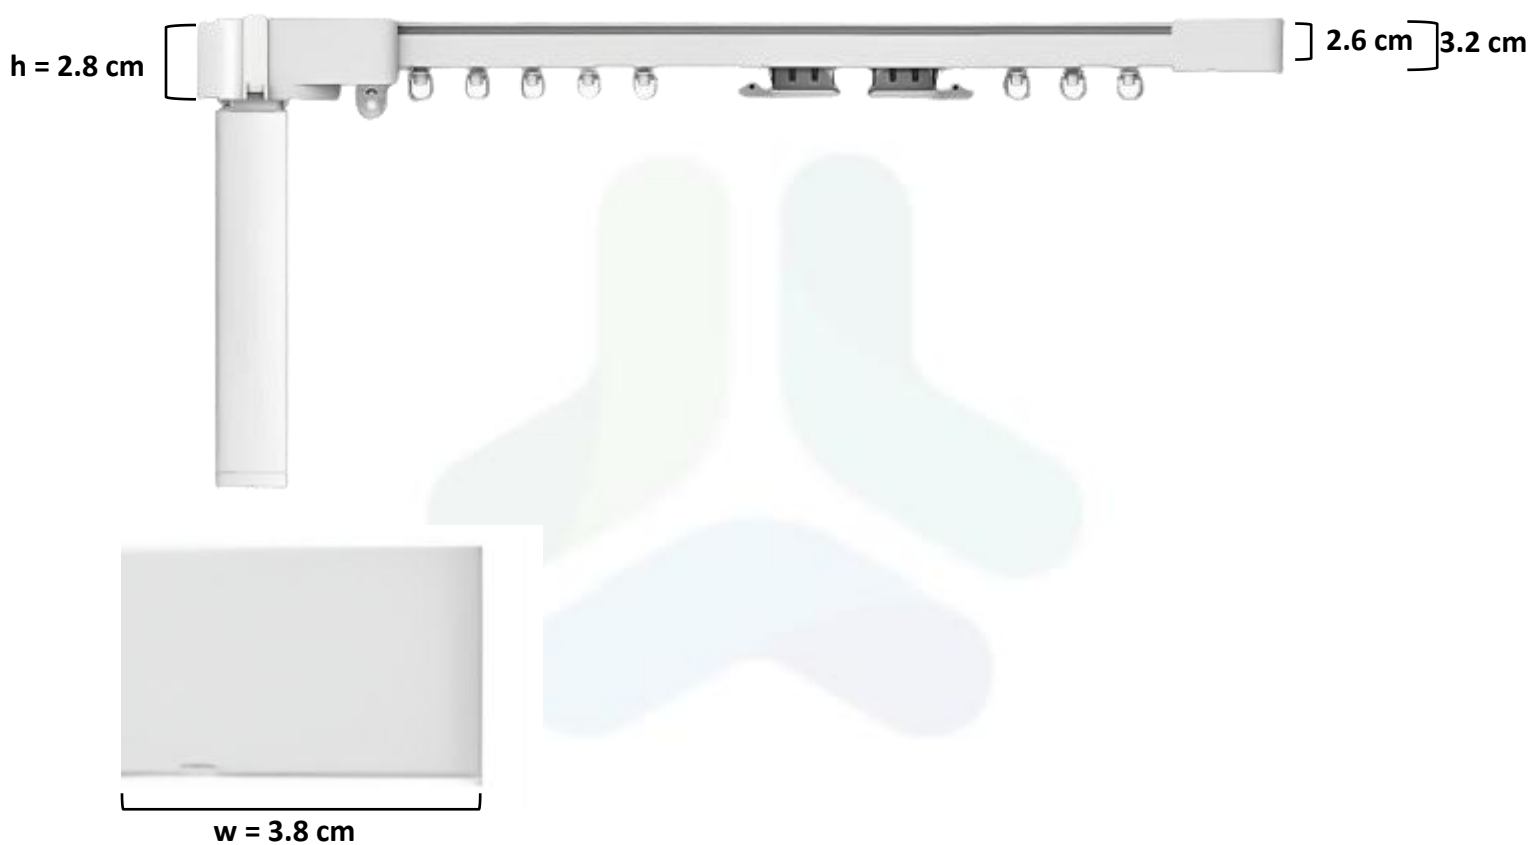

Note: Length of track is customizable upto 30 feet.

Remote Configuration

1. To learn the 1-channel remote with the curtain flow

- Long press the configuration button on the curtain motor for 15 seconds.
- Once the green light appears on the curtain motor, press and hold the P2 button on the back of the remote for approximately 5 seconds. The green light will flash and then turn off, indicating successful pairing.

2. To learn the 2-channel remote with the curtain flow

- Long press the configuration button on the curtain motor for 15 seconds.
- Once the green light appears on the curtain motor, press and hold the P2 button on the back of the remote for approximately 5 seconds, depending on the side you want to control.
- The green light will flash and then turn off, indicating successful pairing.

3. To learn the 16-channel remote with the curtain flow

- On the remote, first select the channel to which you want to assign the curtain motor.
- Long press the configuration button on the curtain motor for 15 seconds.
- Once the green light appears on the curtain motor, press and hold the left side P2 button on the back of the remote for approximately 5 seconds. The green light will flash and then turn off, indicating successful pairing.

Note:- If you have up to seven curtains and want to assign numbers from 0 to 6 on display, press and hold the right-side P2 button. A lock symbol will appear on the display, indicating that the numbering is locked up to 0-6.

Group Control Setup

- Select a group channel (e.g., Channel 15) on the remote.
- Put each curtain motor in learning mode (press the configuration button on the motor).
- Press and hold the left side P2 button on the back of the remote for approximately 5 seconds while the curtain motor is in learning mode.
- The green light will flash and then turn off, indicating successful pairing.
- Control all grouped curtains using the group channel.

Invert Operation

- Press the configuration button once, then long-press for 3 seconds. The motor will move slightly forward and backward to indicate that the inversion is done.

Reset Motor

- Press and hold the configuration button for 3 seconds until the green LED becomes stable. Then, press and hold the configuration button again for about 5 seconds, until the green LED flashes and turns off.

Note: This method will reset all remotes paired with the motor.